



RF CONNECTORS / BNC

RBCPC01R

DIMENSIONS

RBCJC01

DIMENSIONS

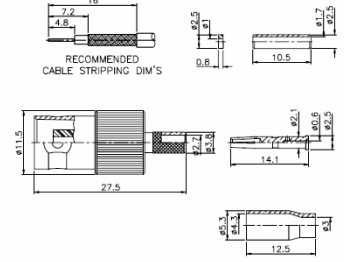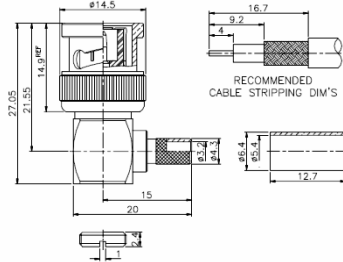

**BNC PLUG
CRIMP
RIGHT ANGLE**



**BNC JACK
CRIMP
STRAIGHT**

RBCPC01

DIMENSIONS

RBCJQC01

DIMENSIONS

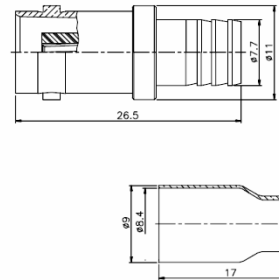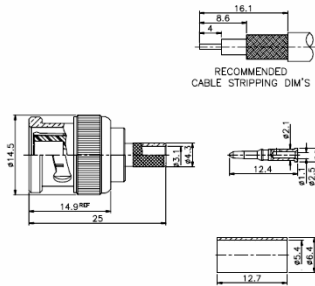

**BNC PLUG
CRIMP
STRAIGHT**



**BNC JACK
QUICK CRIMP
STRAIGHT**

RBCPQC01

DIMENSIONS

RBCJL01

DIMENSIONS

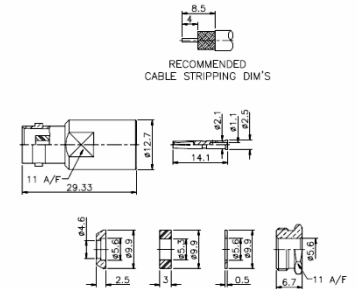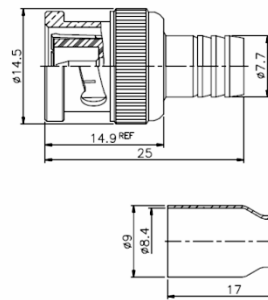

**BNC PLUG
QUICK CRIMP
STRAIGHT**



**BNC JACK
CLAMP
STRAIGHT**

RBCPL01R

DIMENSIONS

RBCJSB01

DIMENSIONS

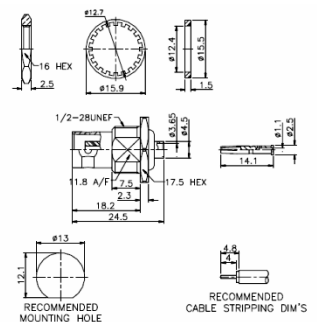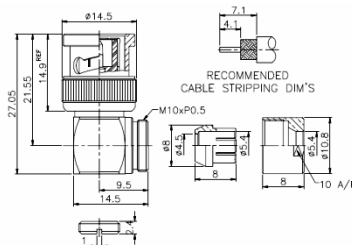


**BNC PLUG
CLAMP
RIGHT ANGLE**

**BNC JACK SOLDER
BULKHEAD
STRAIGHT**

RF CONNECTORS / BNC

RBCJSP01


DIMENSIONS

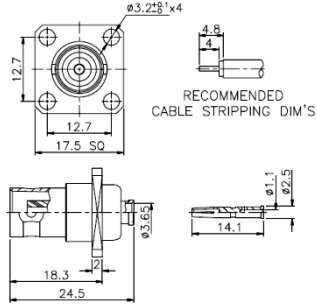

**BNC JACK SOLDER
PANEL MOUNT
STRAIGHT**

RBCJMB01


DIMENSIONS

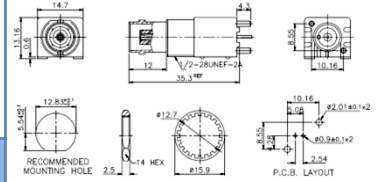

**BNC JACK
P.C.B. MOUNT
STRAIGHT**

RBCJP01


DIMENSIONS

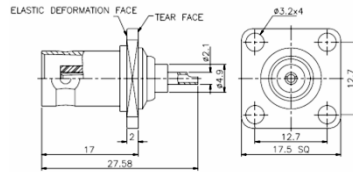

**BNC JACK RECEPT
PANEL MOUNT
STRAIGHT**

RABCJ9BCJ


DIMENSIONS

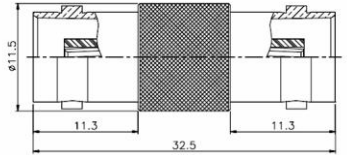

**BNC ADAPTOR
JACK TO JACK
STRAIGHT**

RBCJM01


DIMENSIONS

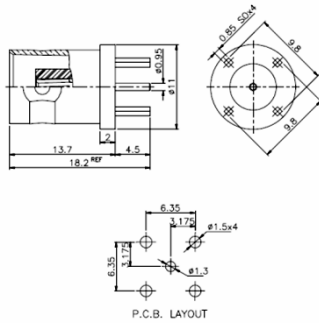

**BNC JACK
P.C.B. MOUNT
STRAIGHT**

RABCJ9BCJB


DIMENSIONS

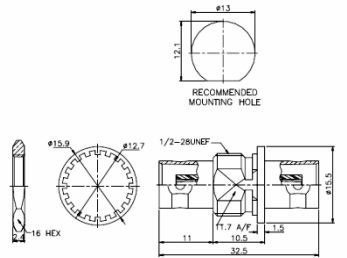

**BNC ADAPTOR
JACK TO JACK
BULKHEAD**

RABCP9BCP


DIMENSIONS

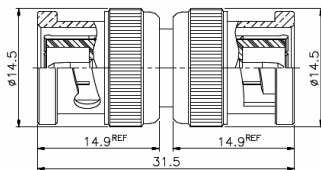

**BNC ADAPTOR
PLUG TO PLUG
STRAIGHT**

RABCJ9BCJBI

DIMENSIONS

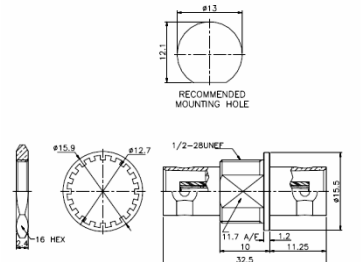

**BNC ADAPTOR
JACK TO JACK
BULKHEAD ISOLATED**



RF CONNECTORS / BNC

RABCP9BCJ

DIMENSIONS

RABCP92BCJT

DIMENSIONS

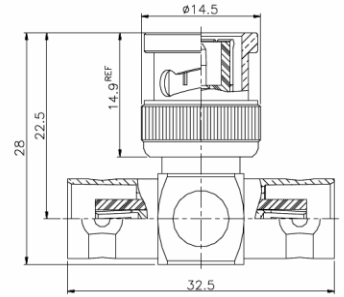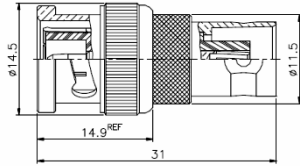

**BNC ADAPTOR
PLUG TO JACK
STRAIG1HT**



**BNC ADAPTOR
PLUG TO 2 JACK
T LINK**

RABCP9BCJR

DIMENSIONS

RABCP92BCJY

DIMENSIONS

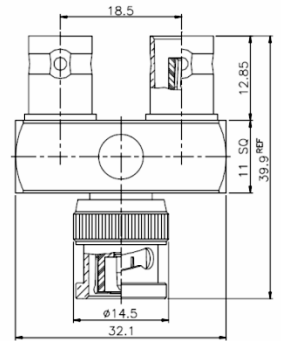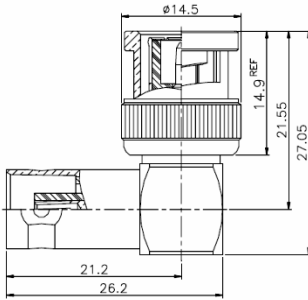

**BNC ADAPTOR
PLUG TO JACK
RIGHT ANGLE**



**BNC ADAPTOR
PLUG TO 2 JACK
Y LINK**

RABCJ92BCJT

DIMENSIONS

RABCJ92BCPY

DIMENSIONS

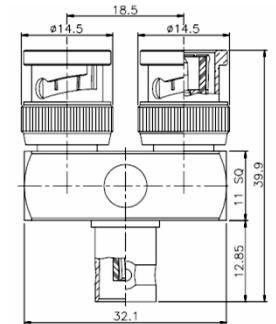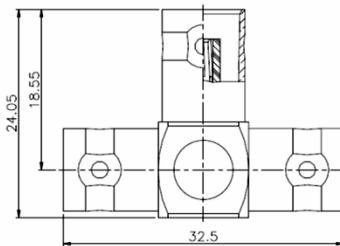

**BNC ADAPTOR
JACK TO 2 JACK
T LINK**

**BNC ADAPTOR
JACK TO 2 PLUG
Y LINK**