


PVC WALL PANELS & CEILING PANELS

◆ APPLICATIONS & ADVANTAGES

- Interior and exterior use for walls and ceilings in office, conference room, warehouse, bathroom, family room, garage, arcade, and green house.
- Maintenance free and easy to clean- just spary off.
- Brightens the interior for fresh clean look.
- Sanitary resists rot, mold, mildew, and chemicals.
- Easy to install and light weight.
- Tongue and groove design, no exposed fasteners.
- Life time warranty.
- More than 3,000 available colors in white, sandstone, gray, woodgrains...
- Matching trims available.

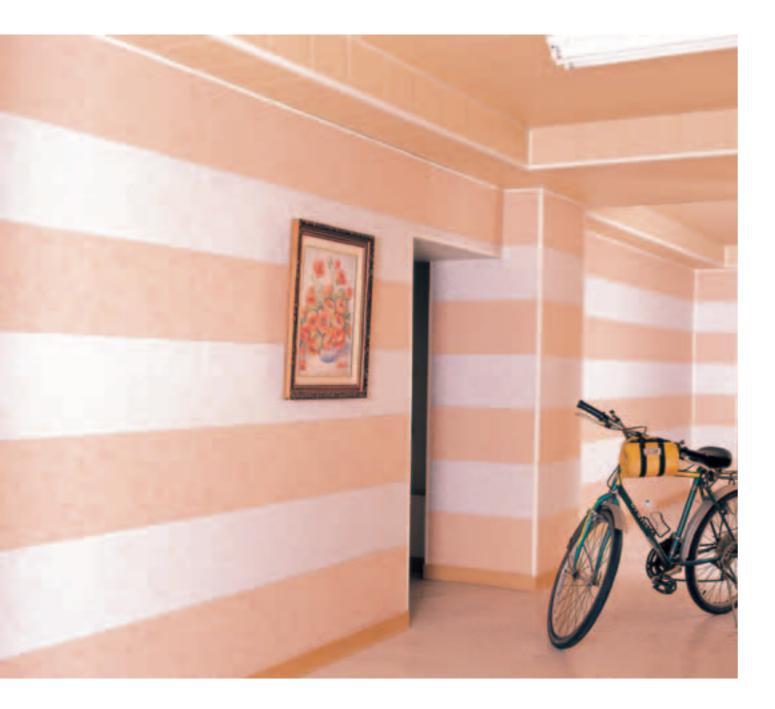


♦ TYPES AND SPECIFICATIONS OF PVC WALL AND CEILING PANELS






Deluxe Type A



Deluxe Type D





♦ MATERIAL SPECIFICATIONS

Туре	Width(mm)	Container Load (Linear Meter)			Popular Colors		
		20'	40'	40' H.Q.			
	120	24,100	48,200	55,600	Printed: (available for Type A, D, H) 010, 018, 019, 0F8, 025, 029, 02F, 048, 05D		
A	180	17,800	35,600	40,800	06D, 07D, 07F, 09F, 09G Laminated: (only available for Type A) 0DT, 1DT, 2DT, 3DK, 3DT, 5DT, 8DT, 36T,		
A	243	12,500	25,000	28,800			
	300	10,500	21,000	24,300	37T, 07M, 02C, 0N0, 0C8, 0C9, 086, 2CF 866, ABQ, 1GT, BQ1, BQ2, BQ3, C81, C0X CUA, CW1, CXC, GG5, GG6, GG7, GG8		
N	243	9,400	18,800	21,000	GG9, HBQ, HCT, HG5, HJ1, HJ2, HJ4, JD1, JH1, JH2, JM1, JM2, JQ1, JY0, KCT, KK5,		
D	180	17,500	35,000	40,000	QB1, QB2, QF1, QF2,		
Н	243	12,700	25,500	28,500			


Range of Length: 1.8M ~ 5.8M

- ♦ Our PVC panel showed good resistance to water testing for 1440 hours by :
 - 1. submerging panel in water of 25°C
- 2. exposing to steam that is rising from hot water of 60°C.

◆ POPULAR COLOR CODE

◆ POPULAR COLOR CODE

PRINTED

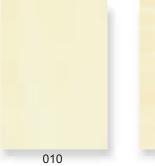





































































LAMINATED



LAMINATED






HJ1 HJ2 HJ4 JD1 JH1 JH2 JM1 JM2

◆ POPULAR COLOR CODE

LAMINATED

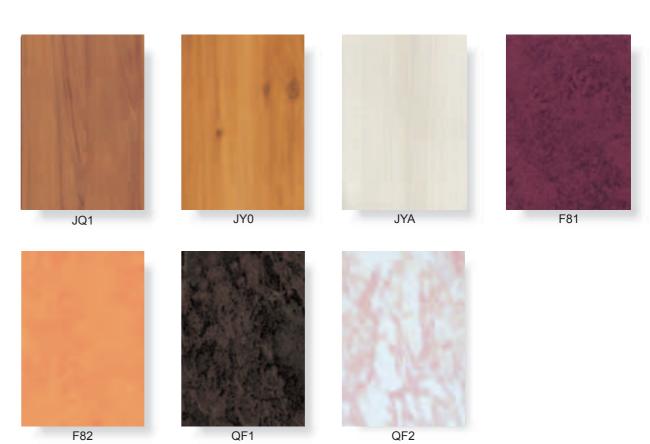



There are more than 3,000 fascinating colors and designs available, which will be sent on request.

♦ POPULAR COLOR CODE

LAMINATED

HK4





HK5







More than 3,000 fascinating colors and designs to delight your infinite imagination.

Put Unique Wall Panels on your decorating list.

◆ POPULAR COLOR CODE

LAMINATED



♦ POPULAR COLOR CODE

■ LAMINATED TYPE - ANTIQUE WOOD



12


QK5 QK6 QK7 QK8

◆ POPULAR COLOR CODE

■ LAMINATED TYPE - ANTIQUE WOOD



LAMINATED

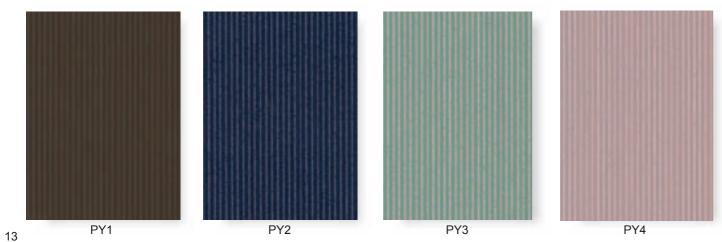

♦ POPULAR COLOR CODE

LAMINATED





PY2 PY3 PY4 MG1

■ LAMINATED TYPE - BAMBOO SCREEN



LAMINATED



CA5

CA6



CA4

CA7

PVC JOINTER · PVC CORNICE

After completing the wall surface ornamental work, more finish effect could be added to the overall decoration by matching with appropriate jointer and cornice. In this regard, our PVC cornices for ceiling are demonstrating such a "finish invigorating" function.

As for the finish and the aesthetic touch of the internal and external corners on the wall surface, various kinds of PVC jointers for wall panels are also available for our customers to choose from. It not only highlights the overall decoration but is also convenient for the decoration workers.



♦ TYPES AND SPECIFICATIONS

■ PVC Jointers for Wall Panel

Item	Figure	Demonstration 1	Demonstration 2
External Corner Joint Strip			
Internal Corner Joint Strip			
Nail-Covering End Strip			
"7" Type End Strip			1
Convex Dado Rail			
Concave Dado Rail			
"1.5" Corner Protector			
Wall Vents T-Bar			

PVC Cornice for Ceiling 2.0" Cornice 1.5" Cornice 1.2" Cornice 1.0" Cornice 0.9" Cornice

♦ COLOR CODE

■ POPULAR COLOR CODES FOR JOINTER AND CORNICE:



020 / Grey










■ MORE COLORS UPON REQUEST

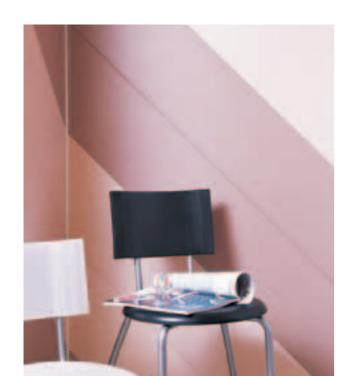

♦ INSTALLATION STEPS FOR WALL PANELS AND CORNICE









STEPS:

- (1) Area measuring: Cut the wall panels ready by the required length and number.
- (2) Nail the internal or external jointers onto two sides or three sides of the wall panel (or the ceiling panel).
- (3) Take the first wall panel. Then push it tightly along the jointer and then secure with the iron or steel nails. After that, take the second wall panel and secure it by the method mentioned, and so on.
- (4) After completing the installation of all wall panels, nail the PVC cornice for ceiling or set the end strip to complete the work.

<< Notes>>

- (1) Upon hitting the internal and external corners during the work, please use the internal and external corner joint strips to facilitate the work.
- (2) When working on the corner and the last piece, be sure to cut the wall panel by the required width. It is imperative to use the joint- strips for the desired match.
- (3) If the wall panel adjacent to the jointers is not fixed by iron nail (or steel nail), then use the heavy-duty adhesive to reinforce the construction effect.
- (4) Please use the nail to fix the PVC cornice.
- (5) The "7" type end strip can be used to decorate the ceiling and the wall surface without nailing.






PVC WALL SKIRTING (BASEBOARD)

Our product presents fashionable look pertaining to the natural materials in displaying the features of elegance, innovation, beauty, graceful sense, durability, acid/alkali resistance, anti-insect, non-ignition, non-decadence and non-conductivity. It can be used at the footings either in your home or in the office.

◆ TYPES AND SPECIFICATIONS OF PVC WALL SKIRTING

■ PVC WALL SKIRTING

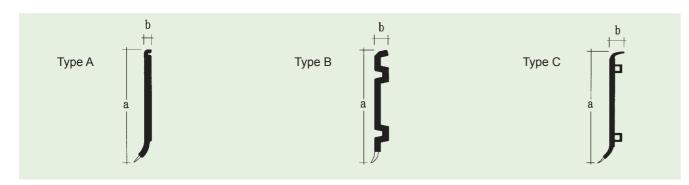

Туре	Height a	Thickness b	Container Load(Linear meter)			Colors	
			20'	40'	40' H.Q.		
А	100m/m	5.0m/m±0.5	27,800	55,600	63,100	Plain: 380, 390	
	85m/m	5.0m/m±0.5	51,500	103,000	116,900	Printed: 388, 398 Laminated: 011, 013, 022	
В	100m/m	8.5m/m±0.5	27,800	55,600	63,100	048, 065, 082, 086, 088, 148, 348, 365, 37T, 948	
	100m/m	10m/m±1	29,000	58,000		More colors upon request	
С	85m/m	8.5m/m±1	37,000	74,000			
	60m/m	6.0m/m±1	45,300	90,600	102,500		

Range of Length: 1.8M ~ 5.8M








♦ COLOR CODE

PLAIN





PRINTED






■ LAMINATED(THE COLORS CAN BE ALSO APPLIED TO WALL PANELS.)
































22

♦ INSTALLATION STEPS FOR PVC WALL SKIRTING






STEPS:

- (1) As a first step, trim and clean the place where the baseboard will be installed.
- (2) For the flat A-type or C-type foam baseboard, please use V-Cut at the internal and external corners. (Figure. 2) The nailing place for the A-type baseboard is the same as the B-type. As for the C-type, the hollow space is provided on the backside.


Internal and External corner V-cut method

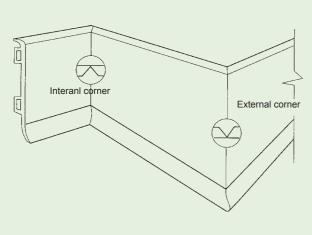

Wall Surface Type	Cut Length (B type use)	V Cut Length (A type use)	V-Cut Length (C type use/100mm)	V Cut Length (C type use/85mm)	V-Cut Length (C type use/60mm)	
Two Interanl Corner Wall surface length Wall surface length Omm Wall surface length -20mm Omm -2mm		Wall surface length -2mm	Wall surface length -2mm	Wall surface length -2mm		
Two External Corner Wall Surface	Wall surface length +5mjm	Wall surface length +9mm	Wall surface length +19.5mm	Wall surfce length +16.5mm	Wall surface length +11.5mm	
Internal/External Corner Wall Surface	Wall surface length -6mm	Wall surface length -4.5mm	Wall surface length -10mm	Wall surface length -8.5mm	Wall surface length -6mm	


♦ INSTALLATION STEPS FOR PVC WALL SKIRTING

■ How to fix 6.0cm Baseboard Type

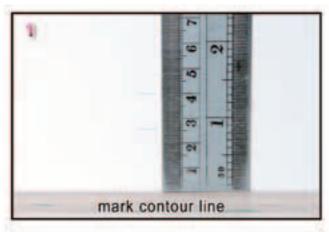





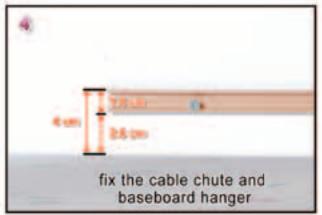











♦ INSTALLATION STEPS FOR PVC WALL SKIRTING


■ How to fix 6.0cm Baseboard Type



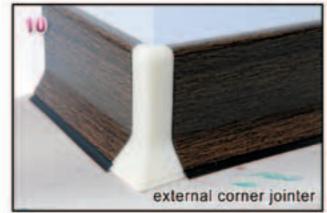

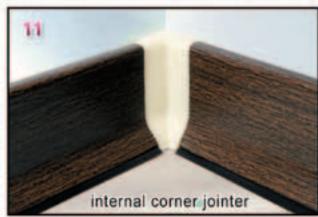





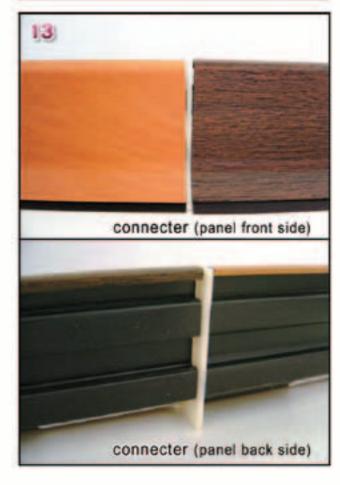


♦ INSTALLATION STEPS FOR PVC WALL SKIRTING

■ Jointer for 6.0cm Baseboard Type

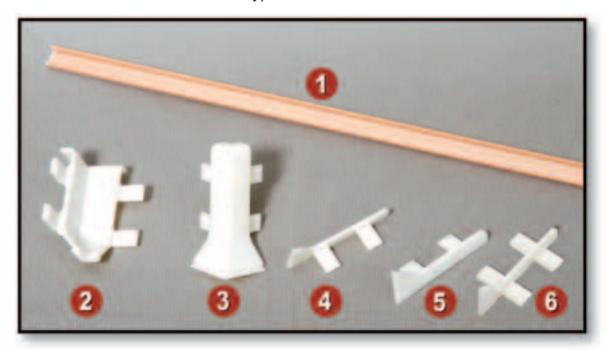

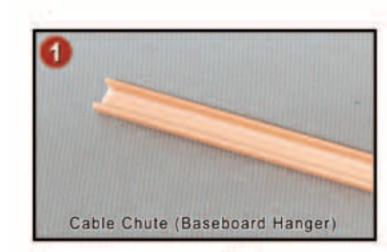

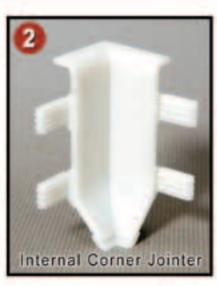











UNIQUE PLASTICS CORPORATION

P.O. BOX 108-258 TAIPEI, TAIWAN

TEL: (886-2) 2741-5391

FAX: (886-2) 2776-9998 & 2772-0866

http://uniqueplastics.com

e.mail: uniquepc@ms14.hinet.net



